


BTP-2200/3000/4000 Series Expanded Diagram

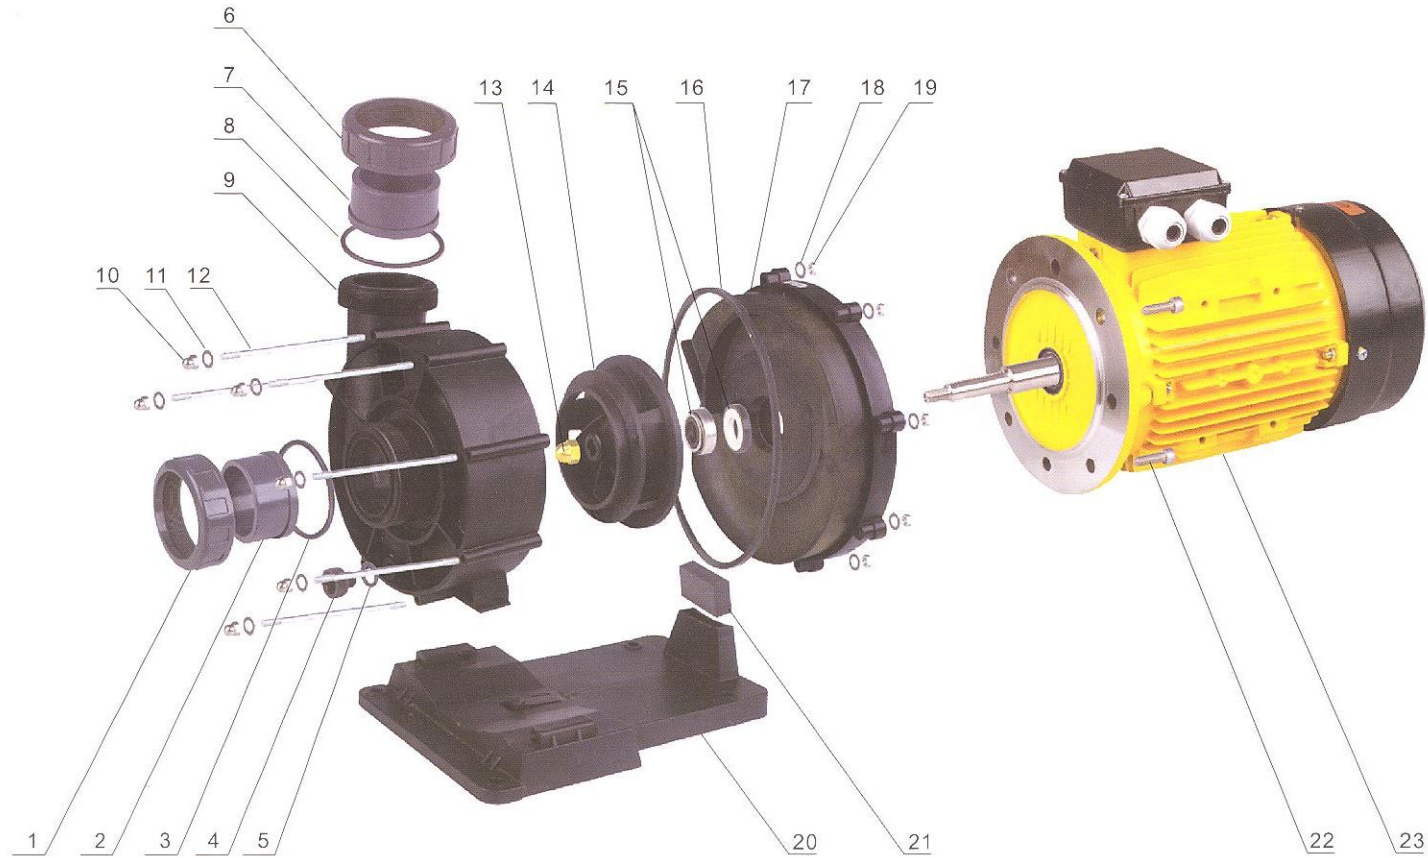

DIAGRAM

No.	Description	No.	Description	No.	Description	No.	Description	No.	Description
1	Inlet Nut	6	Outlet Nut	11	Washer	16	Seal Ring	21	Support Block
2	Inlet Pipe	7	Outlet Pipe	12	Bolt	17	Pump Cover	22	Screw
3	O Ring	8	Outlet O Ring	13	Impeller Bolt	18	Washer	23	Motor
4	Exhaust Screw	9	Pump Body	14	Impeller	19	Nut		
5	O Ring	10	Nut	15	Mechanical Seal	20	Pump Base		